

This space is left intentionally blank.



Talos T6/T8™ Coupon Guide

Carefully cut coupon from this page or make one copy of this coupon.

Copies are usable if made on a standard, carbon-based copier. Make one copy of the original at a time, as copiers tend to reduce the size of the coupon when multiple copies are made.


Fill out the coupon using a #2 (HB) pencil. Fill in one block for each line. Do not mark the back of the coupon.

Note that Talos units are preconfigured with the following options enabled:

- Bill Ways Accepted: Four Way
- T6 Bills Enabled: \$1 - \$20
- T8 Bills Enabled: \$1 - \$100
- Pulse Width: Gaming Short
- Pulses Per Dollar: One
- Interface Mode: Harness Enable
- Acceptance Mode: Mode Zero

Initiating Coupon Mode

1. Remove the bill magazine
2. Use a pencil or a screwdriver to press this button to enter configuration mode, then reattach the bill magazine to initiate Coupon mode:

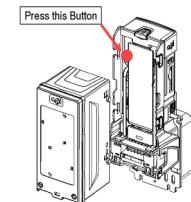

When coupon mode is activated, the bezel lights will rapidly flash

1. Insert a completed configuration coupon
2. Watch the bezel LEDs and count the flashes when the configuration coupon is returned
3. Use this chart to confirm successful programming:

Flashes	Meaning
10	Configuration coupon accepted and unit successfully programmed.
1 - 5	Coupon rejected. Number of flashes corresponds to the coupon section that was improperly filled out. Try again.
7	Coupon not read. Confirm the coupon correct and try again.

FREE VEND COUPONS AND BILL PROGRAMMING

Follow the same process to program the Talos with bills or free vend coupons, but note that the LED codes are slightly different:

Flashes	Meaning
10	The bill or vend coupon has been enabled successfully
7	The bill validator was unable to read the bill or vend coupon. Try again.
3	The bill or vend coupon has been disabled

OTHER DOCUMENTATION

All support documentation, including a downloadable copy of this coupon, can be found at Cranepi.com/support.

Scan	Log in	Tap Support	Tap	Tap
	 Login	 And select My Library	Add a Product Then Use the filters or scroll to find Talos	View Downloads Then Choose your Document

COUPON SECTIONS

SECTION 1 - BILL WAYS

1 - Face up in one direction (green seal first)

2 - Face up in either direction

4 - Face up or down in either direction

SECTION 2 - BILL ENABLES

Fill in on or off to enable or disable a bill.

\$50 and \$100 - T8 Models Only

Fill in on or off to enable or disable a bill.

SECTION 3 - PULSE WIDTH

Sets the width of the pulse, check with your machine manufacturer for details.

SECTION 4 - PULSES PER DOLLAR

Credit pulses per dollar accepted, check with your machine manufacturer for details.

SECTION 5 - INTERFACE MODE

Harness Enable - requires an input from the controller to enable and accept bills.

Always Enable - allows for acceptance at all times, a host or controller cannot disable the unit.

SECTION 6 - ACCEPTANCE MODE

Mode 0 is default. Increasing Acceptance Mode increases security, but may also impact performance. Please contact CPI Technical Support for details.

Print actual size

66mm

Talos T6/T8 Coupon Guide



Sections 1-5 must be filled in. Section 6 is optional.

Bill ways accepted		1	2	4
1		☐	☐	☐
Bill enables		on	off	
2	\$1	☐	☐	
	\$2	☐	☐	
	\$5	☐	☐	
	\$10	☐	☐	
	\$20	☐	☐	
\$50 and \$100 for T800 models only	\$50	☐	☐	
	\$100	☐	☐	
Pulse Width				
3	Gaming Short	☐	☐	☐
	Gaming Long	☐	☐	☐
4	Pulses per Dollar	☐	☐	☐
	Interface Mode	☐	☐	☐
5	Harness Enable	☐	☐	
	Always Enable	☐	☐	
Acceptance mode (section is optional)				
6	Mode 0	☐	☐	☐
	Mode 1	☐	☐	☐
	Mode 2	☐	☐	☐
	Mode 3	☐	☐	☐



Cut carefully on the dotted line. The coupon should be the same size as an American bill when complete.