

ENTROPY 2000

Ticket Dispenser



Manual


Entropy Precision System Inc.

3F-1, No.31, Zhongxing Rd., Xizhi Dist.,
New Taipei City 22175, Taiwan (R.O.C.)
Phone +886-2-2697-6868 Fax +886-2-2697-1986

Entropy's ENTD-2000 Quick Reference Guide

The ENTD-2000 has been designed with features that virtually eliminate ticket jams, it requires very little maintenance, making it the most reliable and compatible ticket dispenser on the market today. This guide is designed to explain the basic functions and specifications of the ticket dispenser. Please feel free to call ENTROPY for more details.

BASIC OPERATION

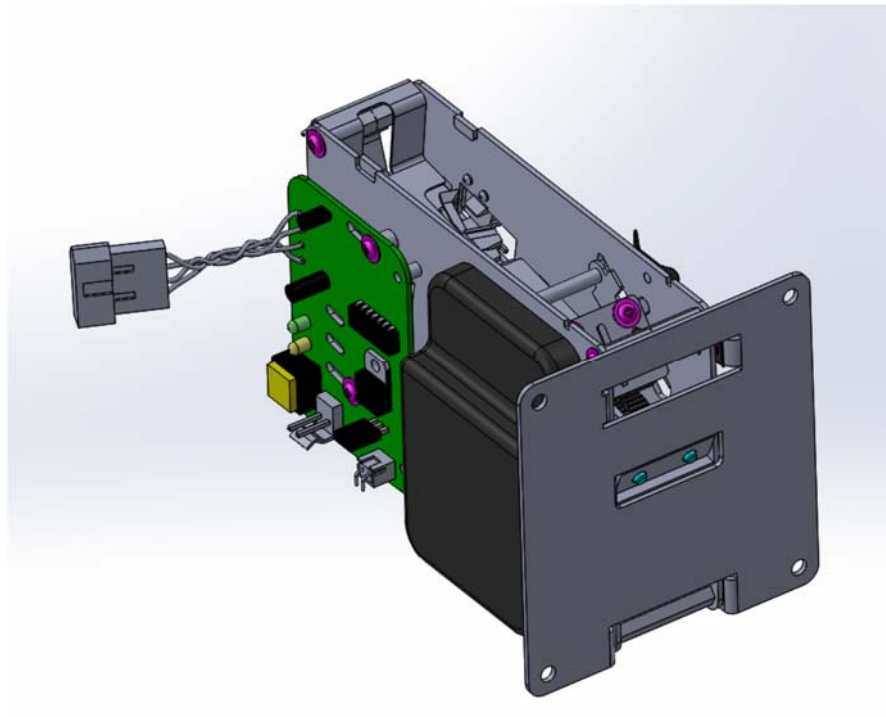

LOADING TICKETS:

- 1) Select ticket width.
- 2) Slide ticket through guide plates until they reach the rollers.
- 3) Depress the auto advance button until the tickets reach the desired location.
- 4) If tickets do not load, ensure that the upper rollers are engaged by pulling back on the latch bar.

NOTE: The upper rollers can be disengaged by pulling on the latch bar. This is useful to clear tickets, etc.

TICKET STOP ADJUSTMENT:

This function allows the length of the tickets protruding from the face plate to be adjusted.


- 1) Turn the two Phillips pan headed screws on the PCB one quarter of a revolution counter-clockwise.
- 2) Move the board forward or backward to the appropriate position.
- 3) Re-tighten the screws.

CLEARING TICKET JAMS:

- 1) Gently pull any tickets that are between the rollers and front plate out the front of the unit.
- 2) Lift the upper rollers by pulling the latch bar back into the unlock position.
- 3) Unlatch the upper ticket guide by raising it off its post in the back.
- 4) Push the tickets away from the ticket width selector toward the optic switch.
- 5) Gently pull the tickets toward the rear of the unit.
- 6) Tear off the damaged tickets and put the upper ticket guide back into place.
- 7) Reload tickets as previously discussed. (Be sure to place the latch bar back to the locked position.)

EASY RELEASE AND RE-INSTALL:

- 1) Hold the dispenser unit and bend the retainer clip to remove it from the face plate.
- 2) Swing the unit down then lift it slightly until the dispenser unit releases from the face plate.
- 3) To reinstall: align the post on the dispenser unit w/the U shape brackets on the face plate.
- 4) Swing unit up and snap in place.

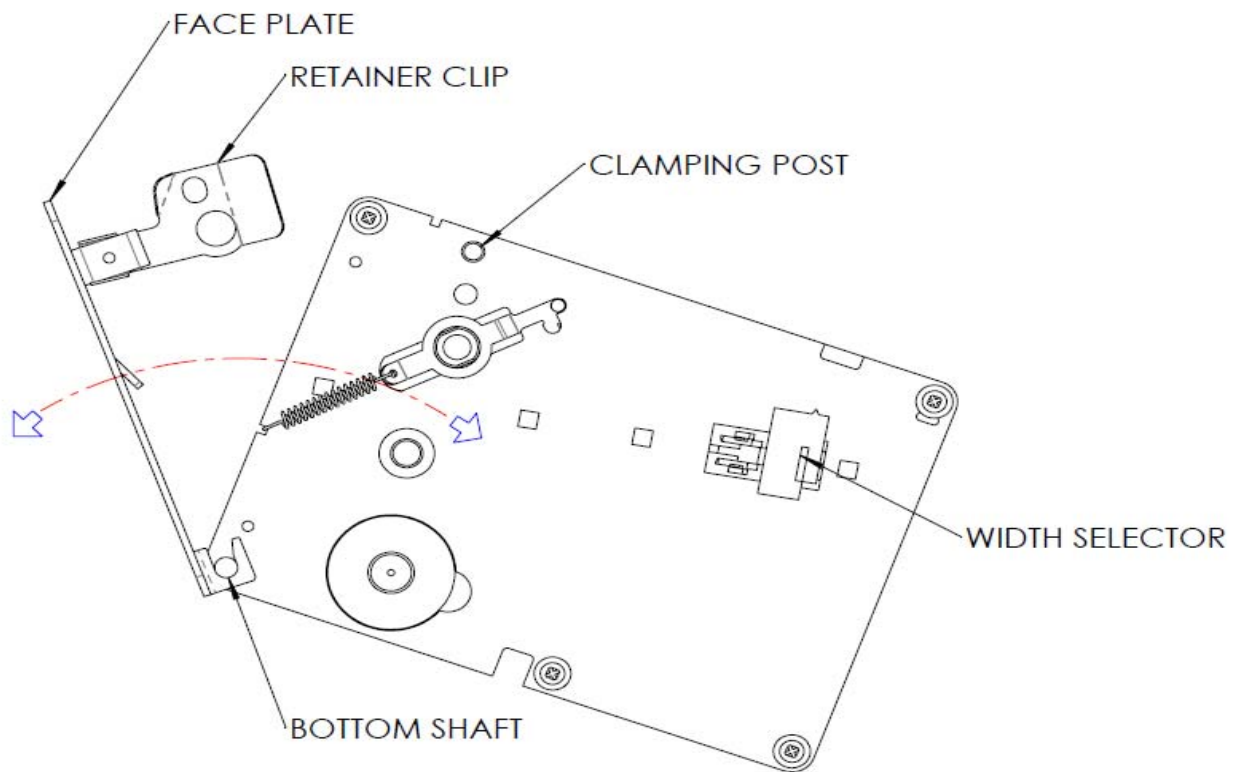

**-MAKE SURE THE POST WAS HOLDEN BEFORE RE-RUNNING-
ENSURE THE DISPENSER IS FIRMLY LOCKED IN PLACE FORE
RUNNING IT AGAIN!**

LED FUNCTION

GREEN LED: Notch output indicator.

YELLOW LED: Motor Enable.

STANDARD TICKET UNIT: TD-963CR

The TD-963CR is designed to fit more applications. The game's software turns the dispenser on with a logic high signal and monitors a return notch signal from dispenser to turn it off

OUT PULSE TICKET UNIT: TD-963PR


The TD-963PR is designed for one logic input – one ticket game. The game pulses the dispenser once and one ticket is dispensed.


The TD-963PR uses a switch rather than a logic input. THE GAME MUST ENSURE THE SWITCH WILL NOT BE ACTIVATED MORE THAN TWICE PER SECOND.

ELECTRICAL CHARACTERISTICS


TD-963CR:

	Min.	Typical	Max.
Supply Voltage	11.0 V	12.0 V	13.0 V
Standby Current		25 mA	
Motor Start Current	1.2 A	1.3 A	1.4 A
Motor Run Current	0.3 A	0.3 A	0.35 A
Motor Enable On Voltage	2.4 V		12 V
Motor Enable On Current	160 uA		4.2 mA
Motor Enable Off Voltage			1.0 V
Motor Enable Off Current			0
Ticket Notch Sink Current			50 mA
Ticket Notch Voltage Pull-up			30 V

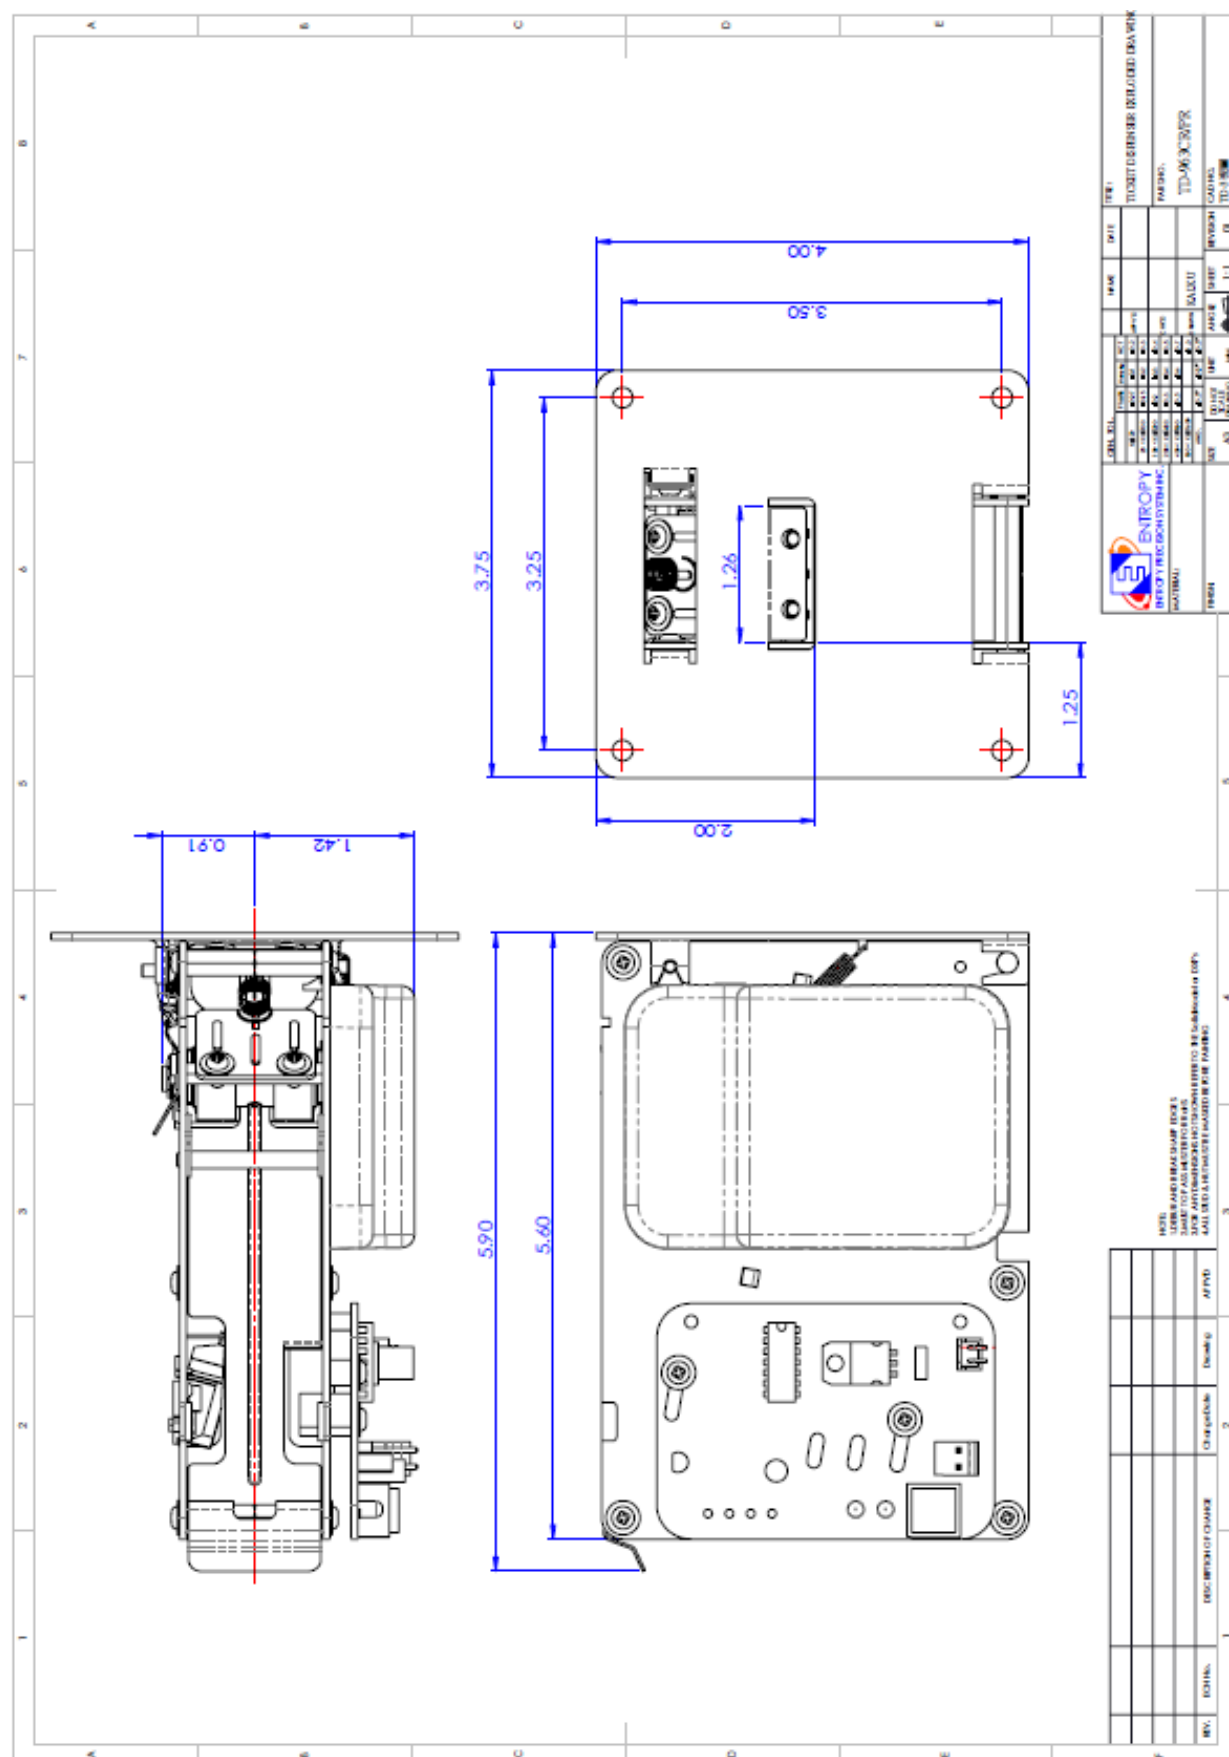


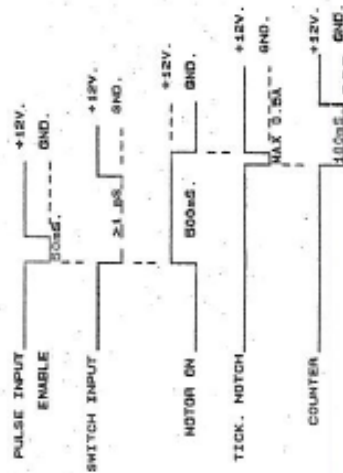

963P

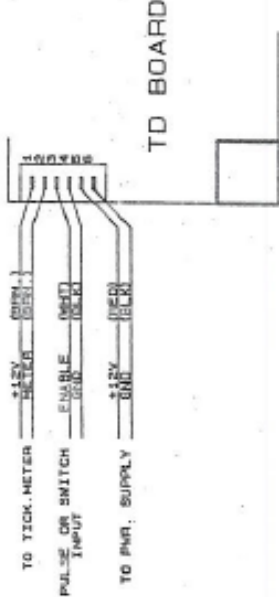


TO BOARD

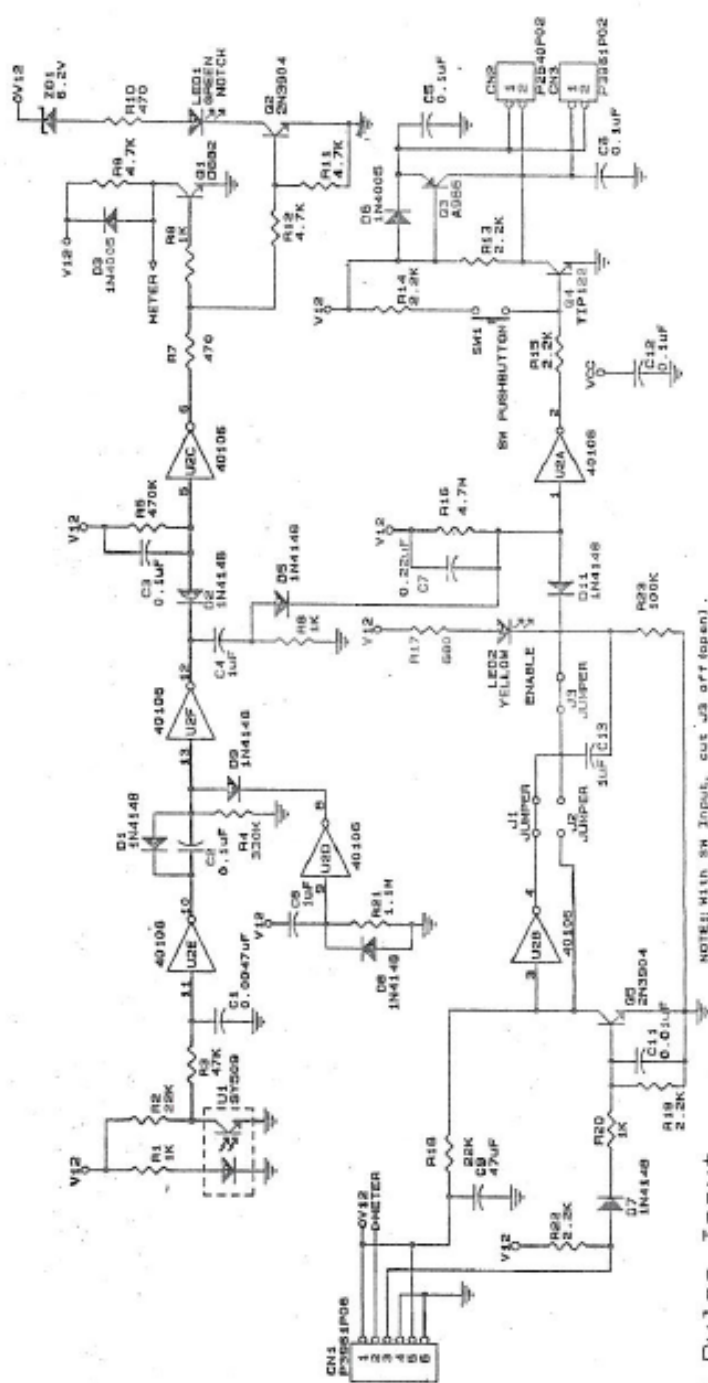

NOTE1: With SW Input, cut J3 (offlopen).
 NOTE2: Enable Pulses may be positive or negative. J3 must be in proper connection. Default: Negative input (J1 short, J2 open).
 NOTE3: For Positive input (J1 open, J2 short).

Model # TD963P, Pulse Input
 Model # TD963S, SW Input

TICKET DISPENSER	
SIZE Document Number	TD-963P, TD-963S
REV	0

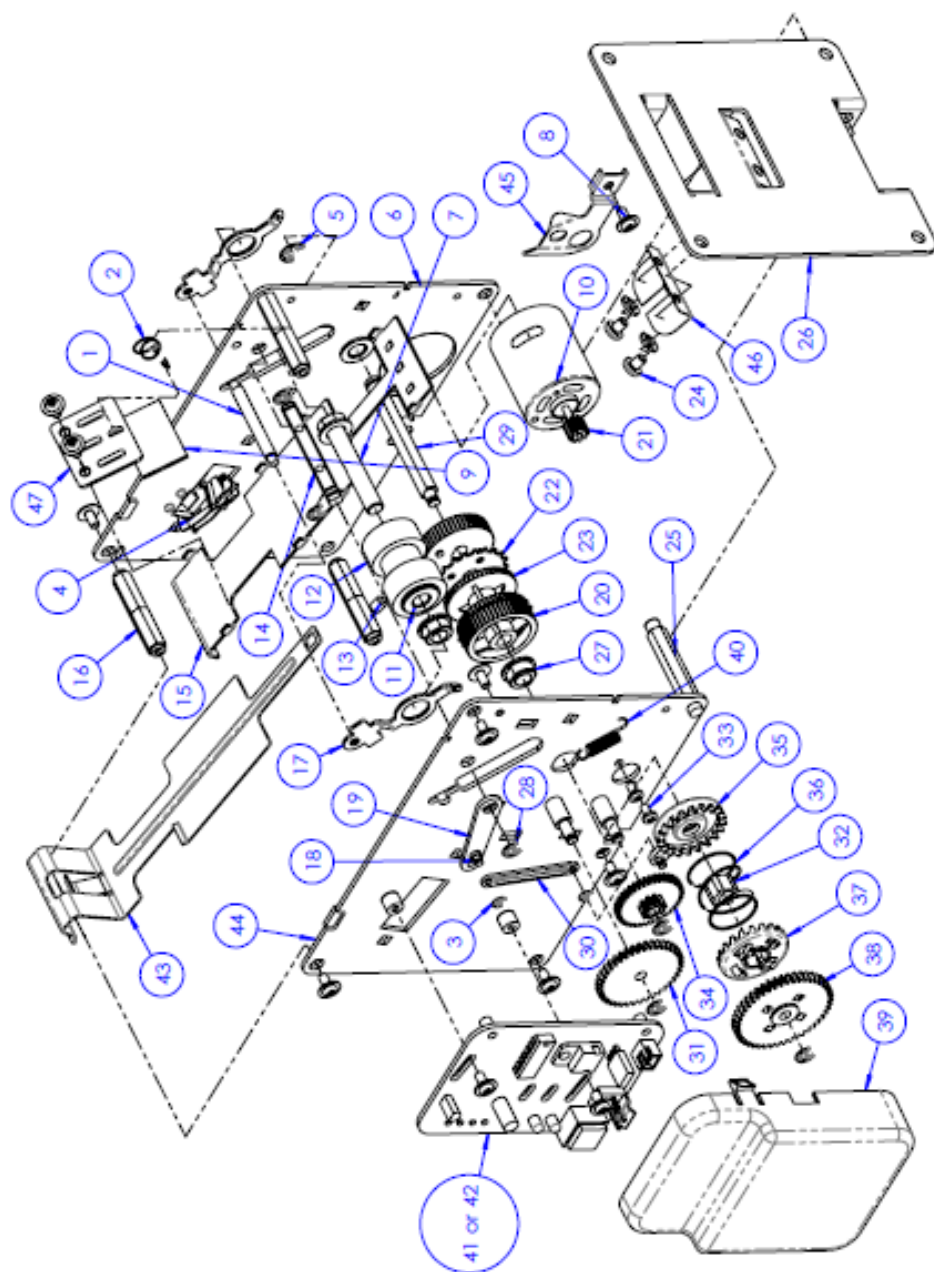[illegible]

NOTE:
LADDER AND BEAR SHAPED LOGS
2,000,000 TONS AVAILABLE FOR SALE
SAND AND GRAVEL AVAILABLE FOR THE SUBMERGIBLE DEPT.
CALL 214-387-6444 OR 1-800-838-6744

[illegible]

TD-963CR/PR

NO.	PART NO.	DESCRIPTION	QTY.	NO.	PART NO.	DESCRIPTION	QTY.
1	104-4011-00	PULL BACK BAR	1	31	101-1015-00	GEAR-12T, 40T	1
2	110-0005-00	STOPPER SPRING	1	32	101-1012-00	CLUTCH SLEEVE	1
3	106-6011-00	2mm E-RING	2	33	106-6002-00	M2.6X0.45+5PS-NI	2
4	101-1005-00	ADJUSTER BLOCK	1	34	101-1014-00	GEAR-1 10T, 39T	1
5	106-6003-00	4mm E-RING	1	35	101-1011-00	BRAKE ACTION PLATE	1
6	102-2039-03	R-SIDE BRKT.	1	36	110-0006-00	CLUTCH SPRING	1
7	104-4013-00	IDLE SHAFT	1	37	101-1010-00	CLUTCH	1
8	106-6005-00	M3X0.5+6C-N1	14	38	101-1013-00	MAIN GEAR 46T	1
9	108-8001-00	STOP RUBBER 1/2" X 1"	1	39	101-1016-00	GEAR COVER	1
10	212-2002-00	DL MOTOR 12V	1	40	214-4001-00	MOTOR LEAD WIRE	1
11	104-4004-01	IDLE ROLLER	1	41	200-963C-00	P.C BOARD A'SSY (CONTINUOUS)	1
12	104-4004-03	IDLE ROLLER RUBBER	2	42	101-1007-00	OPTO SW. COVER	1
13	106-6001-00	M4X5 HEX SCREW	1	43	102-2034-02	TICKET GUIDE (UP)	1
14	104-4015-00	STOPPER SHAFT	1	44	102-2040-01	L-SIDE BRKT.	1
15	102-2041-01	TICKET GUIDE (BOTTOM)	1	45	102-2045-00	HOLD BLADE	1
16	104-4006-00	HEX POST	4	46	102-2035-02	TICKET GUIDE (FRONT)	1
17	102-2007-00	ROLLER SLIDE BRACKET	2	47	102-2038-01	STOPPER	1
18	104-4009-00	STUD	1	48	110-0001-00	ACTION SPRING	2
19	102-2036-00	LEVER ARM	1	49	200-963P-00	P.C BOARD A'SSY (PULSE)	1
20	101-1017-00	ROLLER (OUTER)	2				
21	104-4014	MOTOR PINION 10T	1				
22	102-2042	ROLLER RATCH	2				
23	101-1018	ROLLER (INNER)	2				
24	27-1008	#6-32 SCREW	2				
25	104-4017-00	ROTATION SHAFT	1				
26	102-2044-00	FACE PLATE	1				
27	105-5001-00	SHAFT BUSHING	4				
28	106-6019-00	3mm E-RING	6				
29	104-4012-00	MAIN SHAFT	1				
30	102-2037-01	LINK	1				