


XBA-CRC4 Option Switch Settings

Supported bill CRC 1000, 2000, 5000, 10000 4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject CRC 1000	ON							
★	Accept CRC 1000	OFF							
★	Reject CRC 2000								
★	Accept CRC 2000								
★	Reject CRC 5000			ON					
★	Accept CRC 5000			OFF					
★	Reject CRC 10000				ON				
★	Accept CRC 10000				OFF				
★	Reserved				ON				
★	Reserved				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
★	Reserved							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

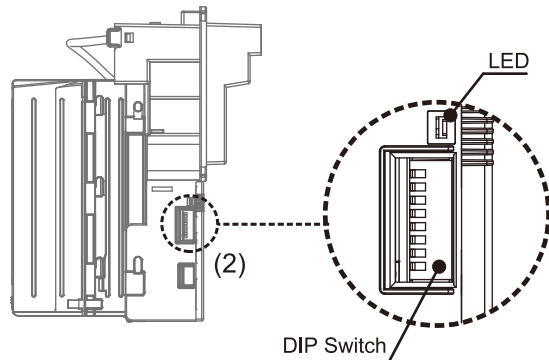


Currency Assign Data

Interface Bill value	ICT104U	ICT104V	Pulse	MDB
BV1	CRC 1000	CRC 1000	CRC 1000	CRC 1000
BV2	CRC 2000	CRC 2000	CRC 2000	CRC 2000
BV3	CRC 5000	CRC 5000	CRC 5000	CRC 5000
BV4	CRC 10000	CRC 10000	CRC 10000	CRC 10000

XBA-CRC4 (Pulse/MDB/ICT104U/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★	Inhibit Active HIGH	ON								
	Inhibit Active LOW	OFF								
★	Reserved									ON
	Reserved									OFF
★	Reserved			ON						
	Reserved			OFF						
★	Reserved				ON					
	Reserved				OFF					
★	Pulse Mode	MDB Mode			ICT104V Mode					
	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer	ON				
★	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT JPSTD converter board	OFF				
	Pulse Mode						ON			
★	Other Mode						OFF			
	Pulse Mode	Other Mode								
★	1 pulse / CRC 1k	MDB Mode						OFF	OFF	
	2 pulses / CRC 1k	Reserved						OFF	ON	
★	10 pulses / CRC 1k	ICT104U Mode						ON	OFF	
	20 pulses / CRC 1k	ICT104V Mode						ON	ON	

This dip switch is located on the CPU board, remove the CPU board cover first.

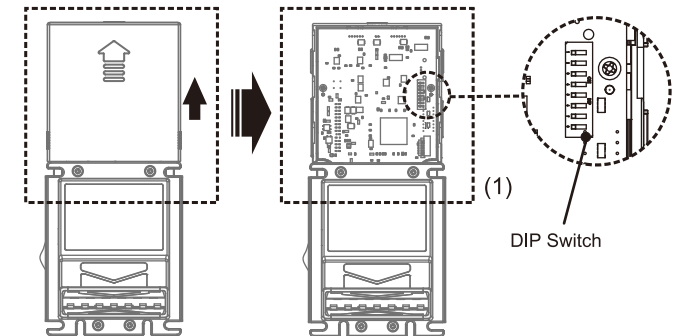

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.
Note : 1. Calibration card is needed.