


XBA-USD6 Option Switch Settings

Supported bill \$ 1, 5, 10, 20, 50, 100 6bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Reject \$ 1	ON							
★ Accept \$ 1	OFF							
Reject \$ 5		ON						
★ Accept \$ 5		OFF						
Reject \$ 10			ON					
★ Accept \$ 10			OFF					
Reject \$ 20				ON				
★ Accept \$ 20				OFF				
Reject \$ 50 & 100					ON			
★ Accept \$ 50 & 100					OFF			
Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

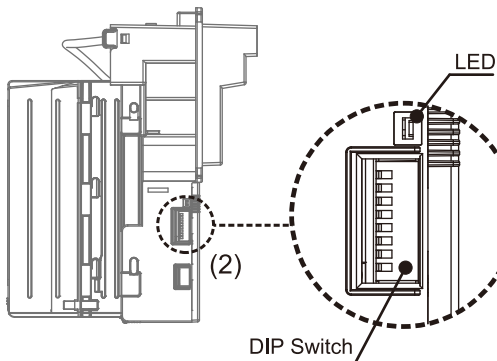

Currency Assign Data

Interface	ICT002U	ICT104U	ICT104V	Pulse	MDB
BV1	USD 1	USD 1	USD 1	USD 1	USD 1
BV2	USD 5	USD 5	USD 5	USD 5	
BV3	USD 10	USD 10	USD 10	USD 10	USD 5
BV4	USD 20	USD 20	USD 20	USD 20	USD 10
BV5	USD 50	USD 50	USD 50	USD 50	USD 20
BV6	USD 100	USD 100	USD 100	USD 100	USD 50
BV7					USD 100

Appendix

XBA-USD6 (Pulse/MDB/ICT002U/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
Reserved		ON						
★ Reserved		OFF						
Reserved			ON					
★ Reserved			OFF					
Reserved				ON				
★ Reserved				OFF				
Pulse Mode	MDB Mode		ICT104V Mode					
Credit-Pulse Normal HIGH	SCALING_FACTOR 100	DECIMAL_PLACE_OFF 2	Connect with coin change		ON			
Credit-Pulse Normal LOW	SCALING_FACTOR 1	DECIMAL_PLACE_OFF 0	Connect with ICT JPSTD Converter board		OFF			
★ Pulse Mode						ON		
Other Mode						OFF		
Pulse Mode	Other Mode							
★ 1 pulse / USD 1	MDB Mode					OFF	OFF	
2 pulse / USD 1	ICT002U Mode					OFF	ON	
4 pulse / USD 1	ICT104U Mode					ON	OFF	
20 pulse / USD 1	ICT104V Mode					ON	ON	

★ Manufacture setting

Note : 1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.
2. Calibration card is needed.

This dip switch is located on the CPU board, remove the CPU board cover first.

